

# Making a Walkie-Talkie Call

## What You'll Need




To use Direct Connect® walkie-talkie service, both you and the person you're calling must:

- Have Direct Connect®-capable phones<sup>1</sup>
- Be located within the same Direct Connect® calling area
- Have rate plans provisioned with Direct Connect® walkie-talkie minutes

To use Nationwide Direct Connect<sup>SM</sup> and International Direct Connect<sup>SM</sup> walkie-talkie service, you need your contact's full Direct Connect® walkie-talkie number (Area ID\*Network ID\*Member ID). Plus, both you and the person you're calling must:

- Have phones<sup>2</sup> that support these services
- Have rate plans provisioned with Direct Connect® walkie-talkie minutes




## Find Your Direct Connect® Walkie-Talkie Number

1. Press the  button.
2. Scroll until you see **My Info** and press  under **Select**.
3. Scroll to **Prvt ID** and press  under **View**.

You will see a set of three numbers, separated by a \*. This entire number (including the asterisks) represents your Direct Connect® walkie-talkie number – for example, 111\*222\*3333. The first set of numbers is your **Area ID**, the second set is your **Network ID** and the last set is your **Member ID**.

Be sure to exchange the full Direct Connect® walkie-talkie number (Area ID\*Network ID\*Member ID) with other Nextel customers so you can contact each other using Direct Connect®, Nationwide Direct Connect<sup>SM</sup> and International Direct Connect<sup>SM</sup> walkie-talkie services.



## Make a Walkie-Talkie Call


1. Enter the **Area ID** number and press  (or scroll through your Phonebook to locate the name/number and skip to step 4).
2. Enter the **Network ID** number and press .
3. Enter the **Member ID** number.
4. Press and hold the **Direct Connect® walkie-talkie button** while you talk, or press  under **Alert** and then press the button.

## Answer a Walkie-Talkie Call









To answer a call, simply press and hold the Direct Connect® walkie-talkie button to talk. Release the button to listen.

## Store a Number

1. Press the  button.
2. Select **Recent Calls**.
3. Scroll to the number you want to store. Press  under **Store**.


4. Enter any additional information to your Phonebook entry.
5. Press  under **Done**.

### Edit a Stored Number

1. From the **Phonebook** screen, press  to scroll to the entry you want to edit.
2. Press  to view the **Phonebook Menu**.
3. Press  to scroll to **Edit**.
4. Press  under **Select** to view the entry details screen.
5. Press  to scroll to the Private ID number.
6. Press  under **Change**.
7. Enter the new Private ID number and press  under **OK**.
8. Press  under **Done**.

### Use VibraCall®

To be silently notified of incoming Direct Connect® walkie-talkie calls:

1. Press the .
2. Select **Settings**.
3. Select **Ring/Vibe**.
4. Select **Vibe All**.
5. Select **CHANGE**.
6. Select **On**.

<sup>1</sup> If you have an i370, i390, i600 or i1000 phone, you may need to upgrade your phone's software to use the enhanced features of Direct Connect® walkie-talkie service. Contact a representative for more information. Some service centers may charge for the upgrade.

<sup>2</sup> These phone models do not support Nationwide Direct Connect<sup>SM</sup> or International Direct Connect<sup>SM</sup> walkie-talkie service: b370, c280, c370, i1000, i2000, i370, i390, i470, i470, Lingo (L3000), m100, m370, m470, r370 and r470.