

Communicate without saying a word

Two-Way Messaging

Two-Way Messaging allows you to stay connected even when you can't make or take a call. Use Two-Way Messaging from your Nextel phone, from nextel.com, or from any email application.

Two-Way Messaging Express text messaging is now available at your fingertips as Two-Way Messaging Express comes with Free Incoming Calling Plans on a pay-as-you-go basis unless you have purchased a subscription to another messaging service.

Two-Way Messaging Premier service is available to any customer for a nominal monthly charge. It is a feature rich, messaging service geared toward customers who want or need enhanced functionality for business critical applications, etc. For additional information, refer to nextel.com and the Two-Way Messaging User's Guide.

What You Need

- Nextel Internet-ready phone
- Premier Messaging services requires a qualifying Nextel Online (NOL) service plan: Two-Way Messaging (standalone or bundled), Messaging Package or Full Service Package
- Nextel.com Member Name and Password (for online features)

A Note About Typing on Your Phone

There are four typing modes available with Nextel Online (NOL): word, alpha, symbol and number. The current mode will display in the lower right corner of your phone screen.

- **WORD** – Press one key for each letter in a word. The phone's software will try to predict the intended word.
- **ALPHA** – Press each key multiple times as needed.
- **SYM** – Enter punctuation and symbols.
- **NUM** – Enter keypad numbers.

Access Nextel Online

For i35s, i30sx, i50sx, i55sr, i58sr, i60c, i80s, i85s, i88s, i90c and i95cl Phones

1. From the idle screen, press **MENU** to access the **Main Menu**.
2. Press **DOWN** to scroll to **Net** and press **OK** under **SELECT**. If prompted, press **OK** under **Yes** to enable security.
3. Your NOL home page displays.
4. Scroll to **Text Messaging** and press **OK**.

For Plus-Series Phones

1. Press **MODE** until the **Net Ready** screen displays.
2. Press **OK** under **OK**. If prompted, press **OK** under **Yes** to enable security on your phone. Your NOL home page displays.
3. Scroll to **Text Messaging** and press **OK**.

Send a Message from Your Phone

Send messages to almost anyone with a messaging-capable phone or anyone with an email address right from your Nextel phone.

Two-Way Messaging Express

1. From the **Two-Way Messaging** main menu, scroll to **Send Message** and press **OK**.
2. Enter a 10-digit phone number (in NUM mode) or enter an email address (in word or alpha mode) and press **OK**. - Or - Select the **My List** option from the main menu and select a recipient from your contact list. You can access the **My List** option from either the main menu or by pressing the **MENU** key from the enter address screen.
3. Compose your message using word or alpha mode.

Two-Way Messaging Premier

Address the Message

1. From the **Two-Way Messaging** main menu, scroll to **Send Message** and press **OK**.
2. Scroll to the desired address type and press **OK**. Choose from the following address types:
 - **New Address:** Enter a 10-digit phone number (in NUM mode) or enter an email address (in word or alpha mode) and press **OK**.
 - **Sent Address:** Your phone displays the last 9 addresses to which you have sent messages. Scroll to the desired address and press **OK**.
 - **My Addresses:** View a list of contacts stored in your Nextel Address Book by pressing **OK** under **Show**. Scroll to the desired contact and press **OK** under **Go to**. Select the phone number or email address to use in sending your message and press **2Way**.

Create the Message

3. Scroll to the message type and press **OK**. Choose from:
 - **Compose New:** Type your message using word or alpha mode.
 - **Sent:** Your phone displays the last 9 messages sent. Scroll to the desired message and press **OK**.
 - **My Messages:** Choose from a list of default messages available. Scroll to the desired message and press **OK**.

Read Your Messages

1. From the **Two-Way Messages** main menu, scroll to **Read Messages** and press **OK**.

2. Scroll to **Message Inbox** and press **OK**. An asterisk (*) indicates unread messages.
3. Scroll to the message you wish to read and press **OK** under **View**.

Respond to Messages You Receive

1. After viewing a Two-Way Message, you may send a reply.
2. While viewing the message, press **OK** under **Reply**.
3. Scroll to the type of reply to send **Choose** from:
 - **Attached Reply:** Scroll to select a reply the sender has attached to their message (if one was attached) and press **OK** under **Send**.
 - ***My Replies:** Choose from a list of default replies. Scroll to the desired reply and press **OK** under **Send**.
 - **Create Reply:** Type a reply using word or alpha mode. When finished, press **OK** under **Send**.

*Applies for Two-Way Messaging Premier only.

Forward, Delete or Save Messages

After viewing a Two-Way Message on your phone, change the display options by pressing **MENU** or **MENU**.

- **Forward:** press **OK** under **Fwd** and chose the address type you wish to use (see *Address the Message*).
- **Delete:** press **OK** under **Del** then press **OK** under **Yes** to delete the message.
- ***Save:** press **OK** under **Save** to save the message. You may save up to 20 messages in the **Saved Messages** folder.

*Applies for Two-Way Messaging Premier only.

Send a Message from Nextel.com

From the **MyNextel** tab on nextel.com, select **Send a Message** to send a message to one Nextel customer or **Send a Group Message** to a group of up to 20 Nextel customers.

Send a Message from email

From email, address your message to a Nextel Two-Way Messaging subscriber in this format:

1. 10-digit phone number followed by **@messaging.nextel.com** (e.g. 7035551212@messaging.nextel.com).
2. Type your message.
3. Attach replies if desired. Enter up to 6 replies (100 characters each) for recipients to use when responding to your message. Precede each reply with a double tilde (~) and follow each replay by pressing **Enter** on your keyboard.
4. Send your message as usual.