

# Nextel Online® Basics

## Always Connected with Nextel Online

Welcome to Nextel Online (NOL). This guide contains the basic information to get started using NOL on your phone.

### What You Need

- Nextel Internet- ready phone
- Nextel Online service plan
- Nextel Member Name and Password (optional)

### Register with Nextel



For services such as my View, Mobile Email, Address Book, or the advanced features of Two-Way Messaging, you'll need to register with Nextel to obtain a Member Name and Password.


1. From nextel.com on your PC, click **Register with Nextel**.
2. Complete the **Member Information and Phone Information. Account Information** may be skipped unless you require Administrator access\*.
3. Complete the registration process by clicking on the link contained in your confirmation email.



\*Account Administrators are authorized to make changes to or purchases on their company's Nextel account. Account Administrators also have access to Account Management and Address Book Administration features.

### Nextel Online Navigation Keys

Use the following keys to navigate:


 
 
**Home**  or  - Press to return to your NOL home page.

**Back**  - Press to return to the previous screen.

**Scroll**  or  - Press the scroll key once to scroll one line at a time, or press and hold to scroll one page at a time when arrows appear on the phone screen display (↑↓) indicating that more text is available.

### Accessing the Nextel Online


**For i30sx, i50sx, i55sr, i80s, i85s, i90c, and i95cl Phone Models:**

1. From the idle screen, press  to access the **Main Menu**.
2. Press  to scroll to **Net** and press  under SELECT. Continue with instruction 3.




**For Plus-Series Phone Models (i500plus, i550plus, i700plus, i1000plus and i2000plus):**

1. Press  until the **Net Ready** screen displays.
2. Press  under OK. Continue with instruction 3.

### For all Phones:



3. The first time you access **Net** or **Net Mode**, you will be asked to enable security to ensure that your transactions remain private and secure. Press  under Yes. Your NOL home page displays.

**NOTE: Home pages will vary depending on the NOL service plan to which you have subscribed.**



4. Scroll to highlight the service you wish to access and press  under OK.  
**USER TIP: Press the number shown to the left of your desired selection to automatically jump to that service.**
5. To return to your home page from anywhere within the various menus and sub-menus, press the home key, either  or .

### Exiting Nextel Online

 
**For i30sx, i50sx, i55sr, i80s, i85s, i90c, and i95cl Phone Models:**

1. From anywhere within NOL, press and hold  until the **Browser Menu** displays.
2. Scroll to **Exit Browser** and press  under OK.
  - The next time you access **Net**, you will return to the NOL page you last left.

### OR

1. From anywhere within NOL, press  to return to your NOL home page.
2. Press  a second time to return to the idle screen.
  - The next time you access **Net**, you will enter at the NOL home page.





**For Plus-Series Phone Models (i500plus, i550plus, i700plus, i1000plus and i2000plus):**

 



 
 
From anywhere within NOL, press  to return to another mode such as **Phone, Private** or **Group Mode**.


 
- The next time you access **Net Mode**, you will return to the NOL page you last left.

 
 
 

### Typing with Your Phone


With NOL pages that require typing, there are generally four text-input modes available: Word, Alpha, Number and Symbol. The display option in the lower right corner of the phone screen indicates the current text entry mode.

**WORD** or **word** - press one key for each letter in a word. The phone's software will try to predict the intended word. For example, to type "test", press    .

**Next**  - In word mode, press to display other words that match the keystroke sequence you entered. For example, after entering     for "test", press  to get "vest".



**Punctuation**  - In word mode, press to automatically insert one of eight basic punctuation symbols. Press  to display alternate punctuation choices. Additional punctuation and symbols are available in **SYM** mode.



**ALPHA** or **alpha** - press each key multiple times as required for the desired letter. For example to type "test", press  once (t), press  twice (e), press  four times (s) and press  once (t).

 
 
**SYM** - allows entry of punctuation and symbols. Press the number that corresponds with the symbol shown on the phone screen display. To access additional **SYM** screens, press  under More.

**NUM** - allows entry of keypad numbers. Press the desired number on your phone's keypad.

Your phone keys assume different functions when using **NOL**:

**Backspace/Erase** -  or  - Press once to backspace or to erase a single character. Press and hold to erase all the displayed text.

**Space**  or  - Press once to insert a space.

**Shift**  or  - Press and hold until you see the next entry mode indicator change to reflect the desired case.

<u>Text entry mode indicator</u>	<u>Desired Case</u>
word or alpha	➡ Lowercase text
WORD or ALPHA	➡ Uppercase text
+WORD or +ALPHA	➡ Caps Lock

*Caps Lock is not available with all phone models.*

**NOTE: The default for word and alpha mode is uppercase at the beginning of a sentence, lowercase elsewhere.**